

FIG. 1


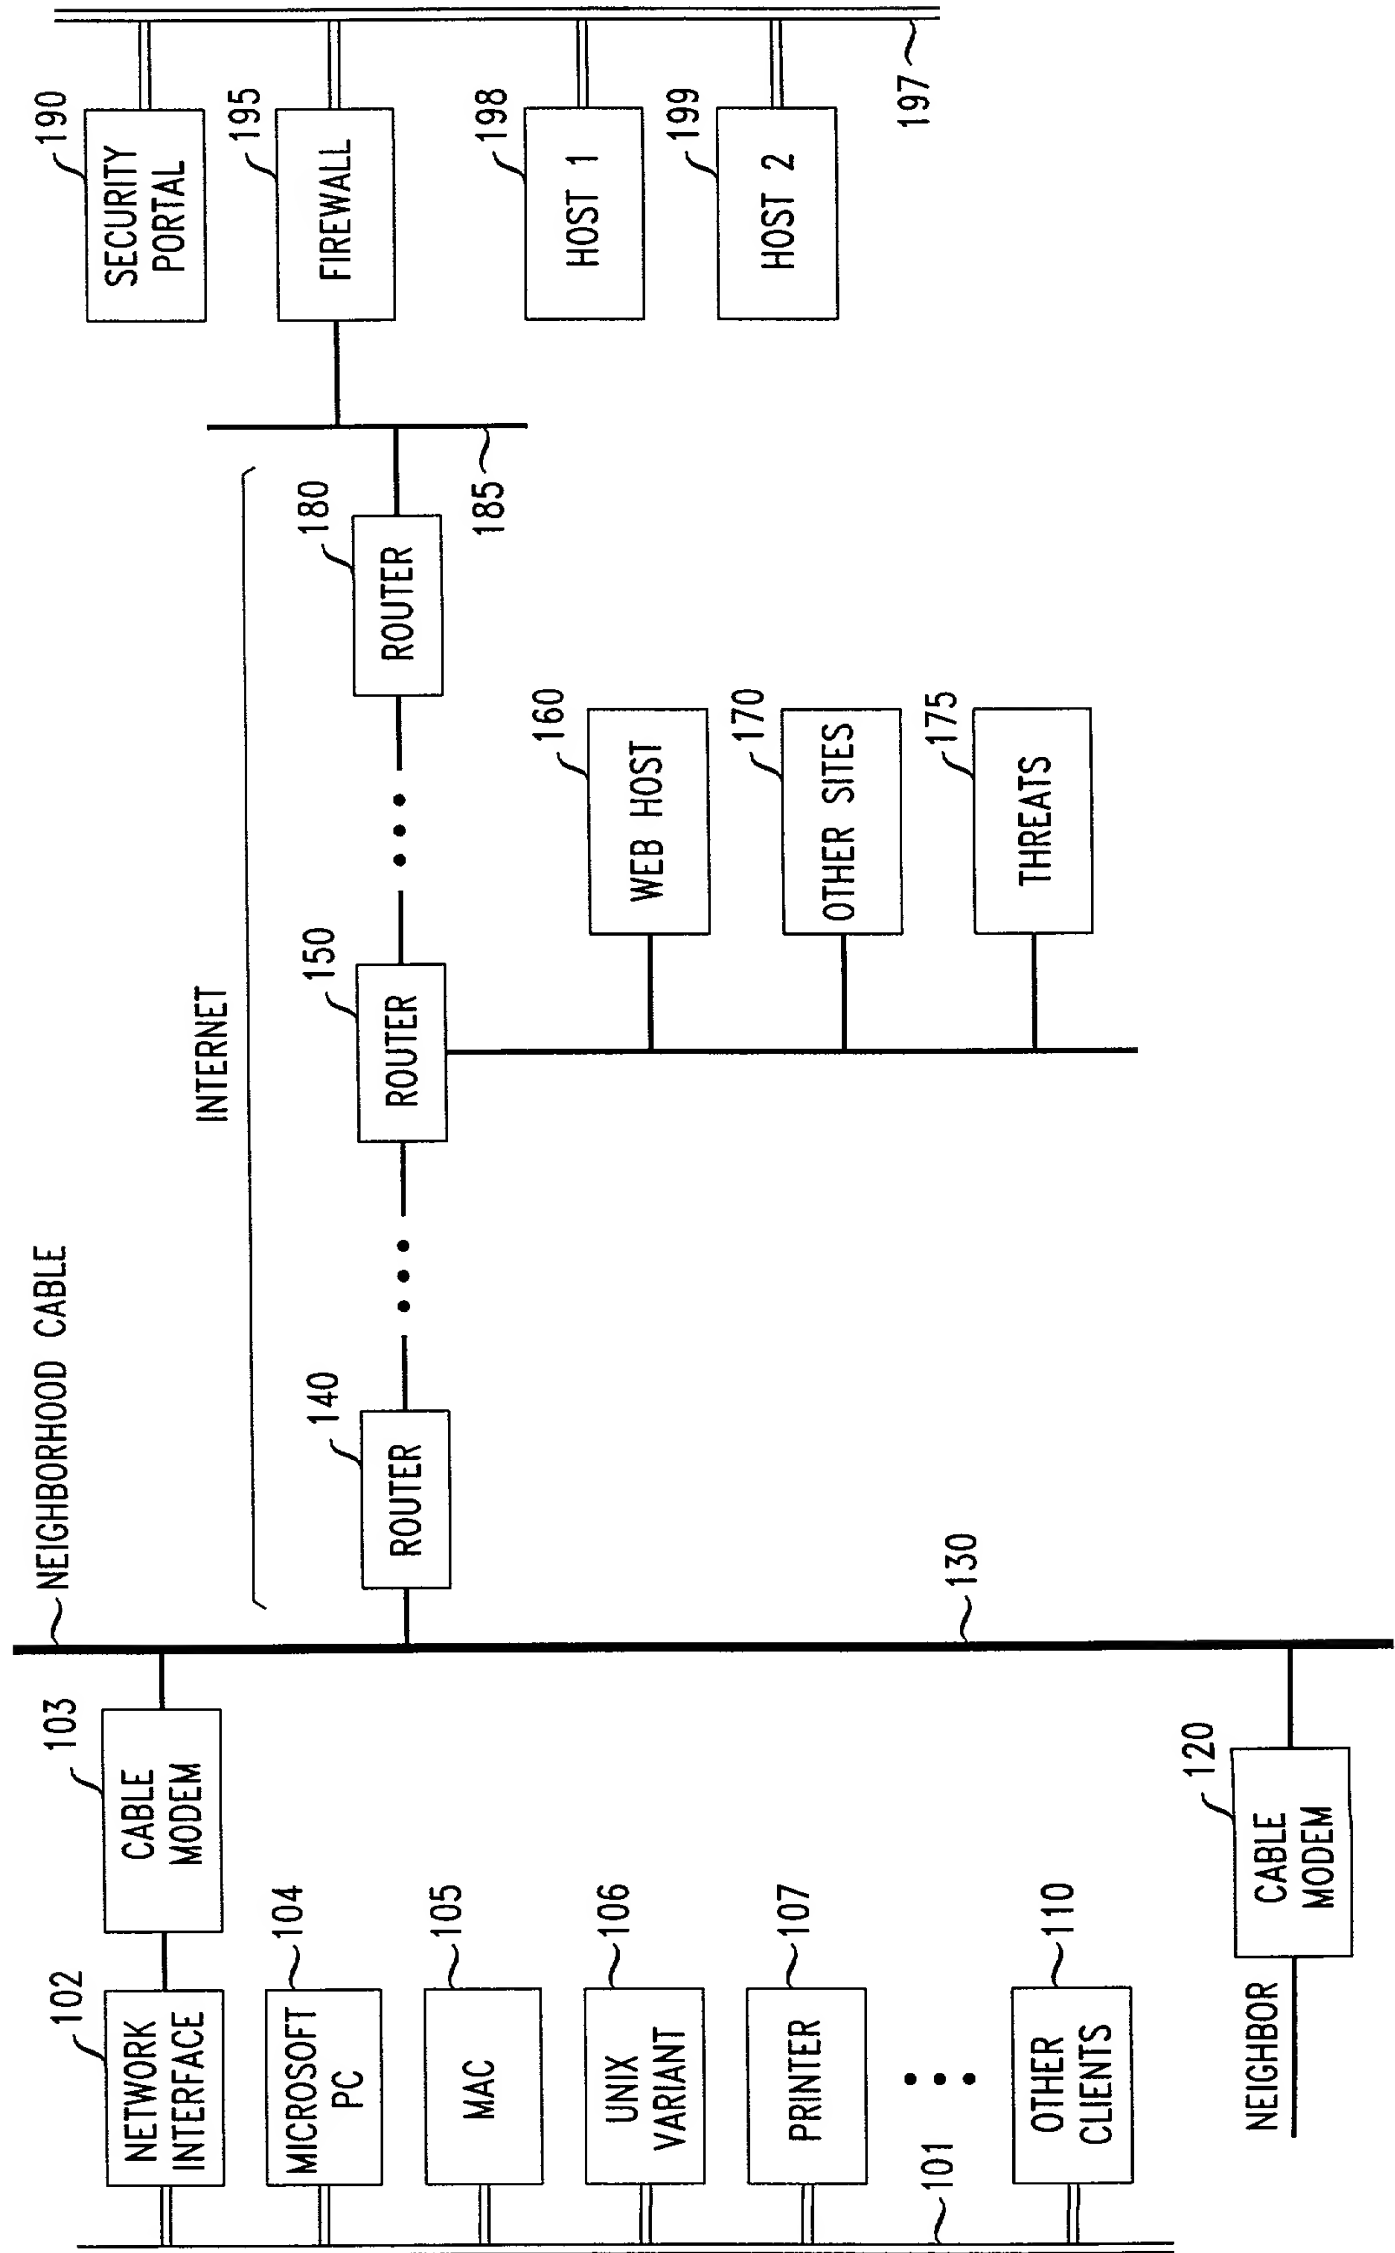


FIG. 2

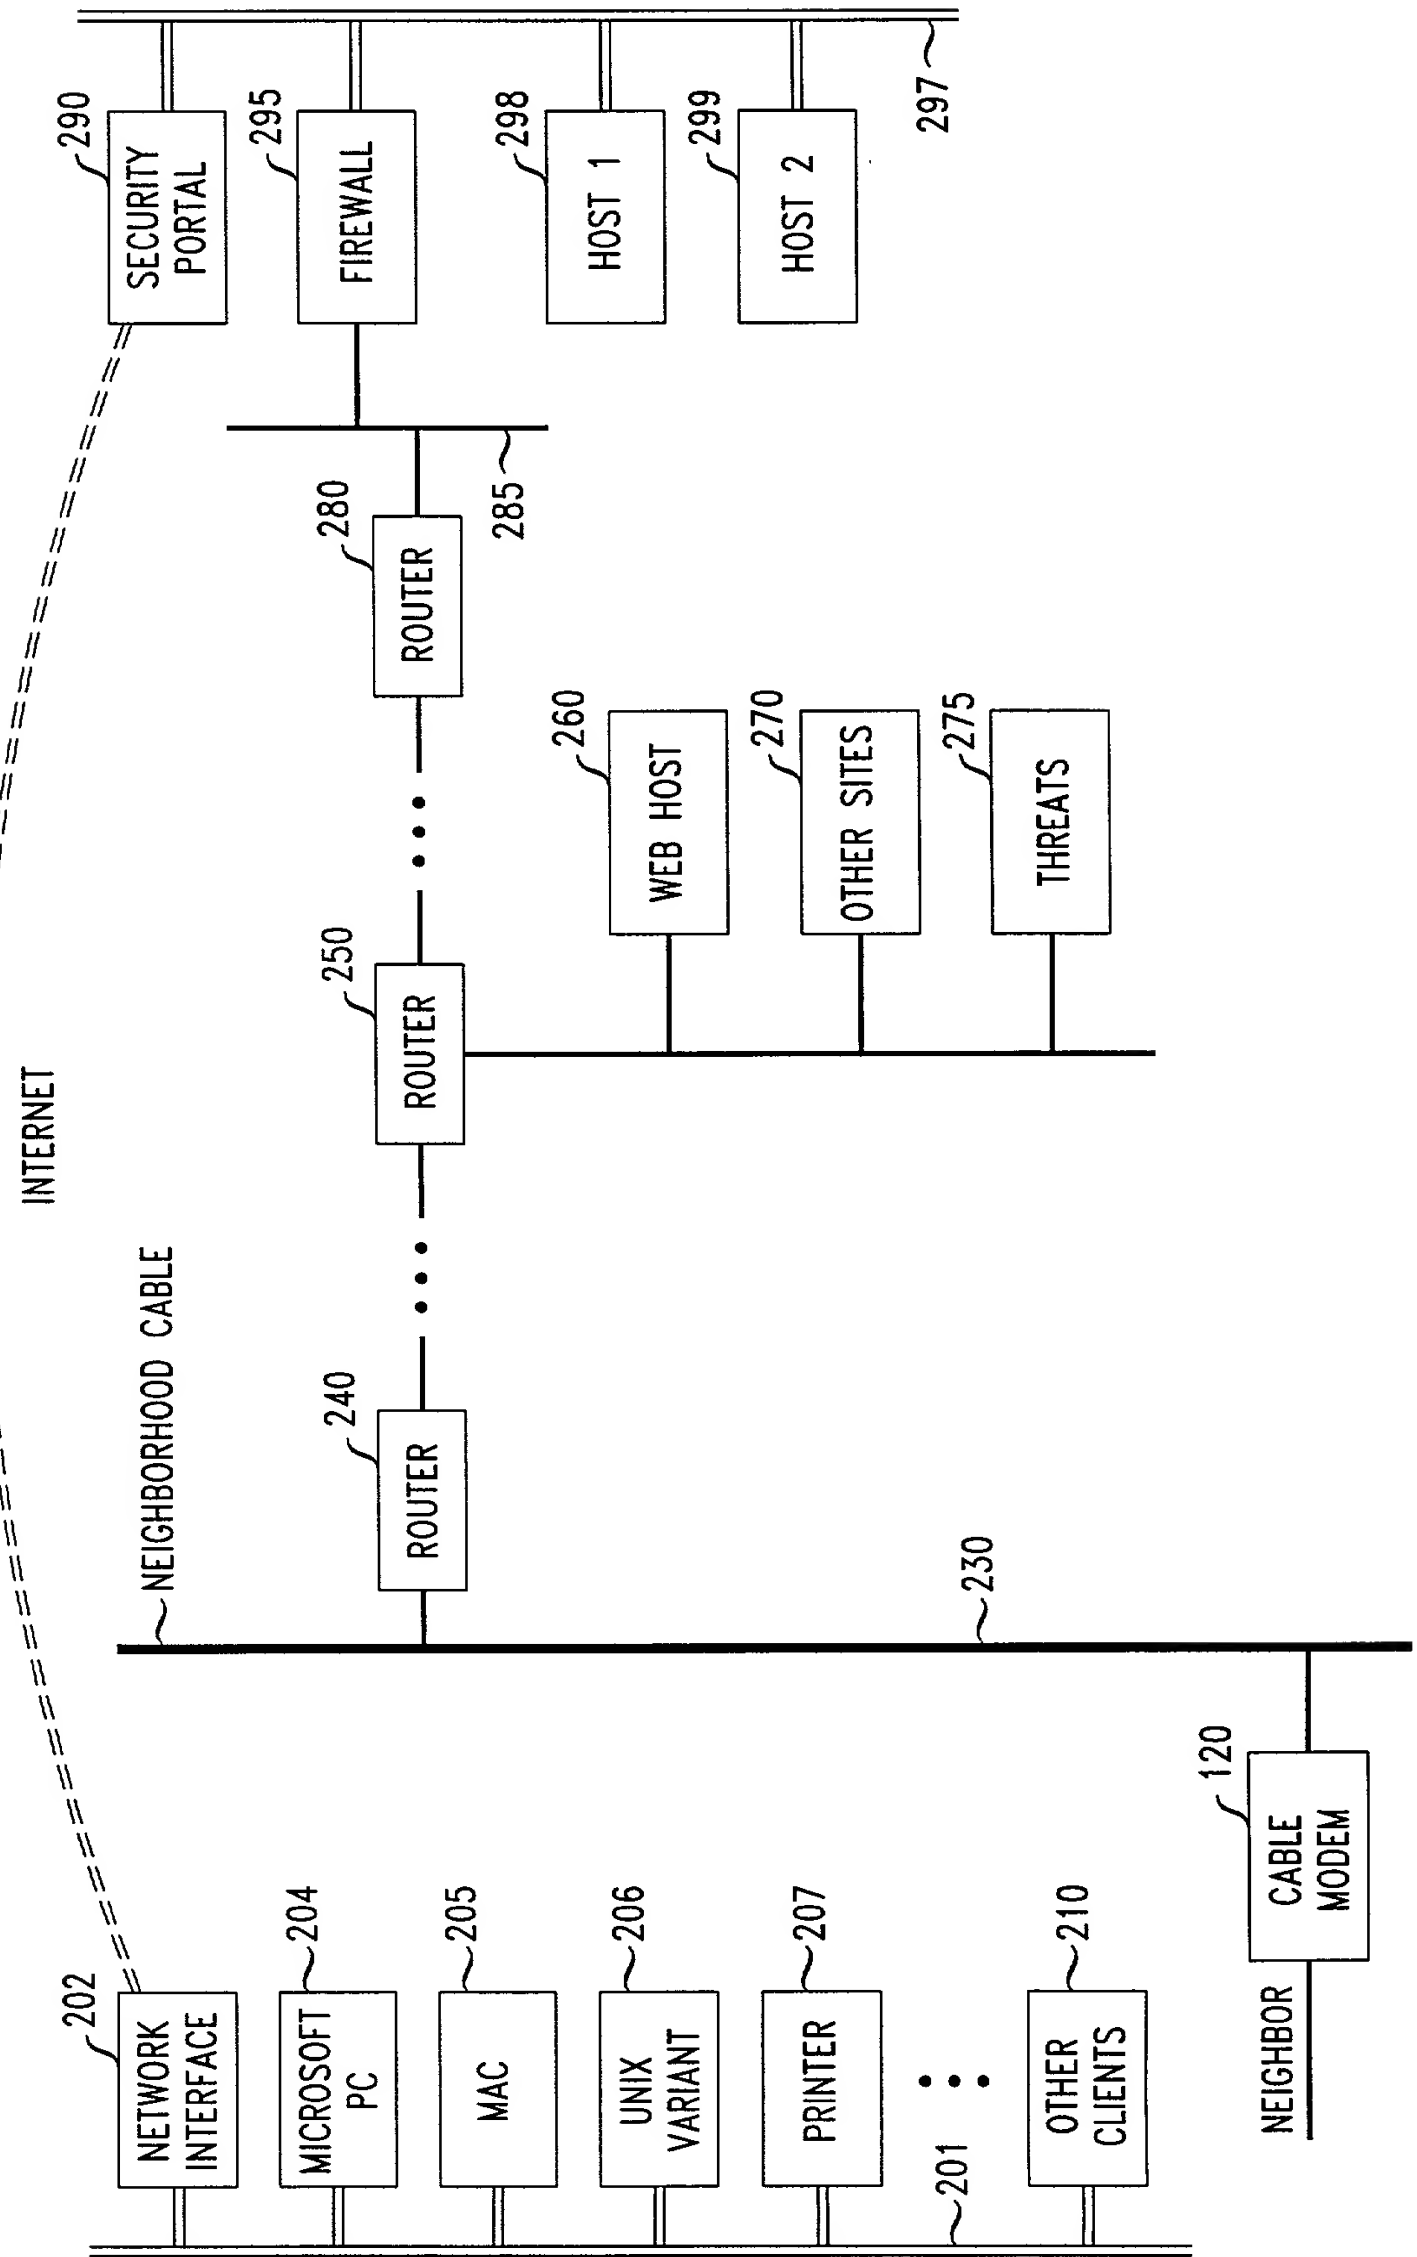

3/15

FIG. 3

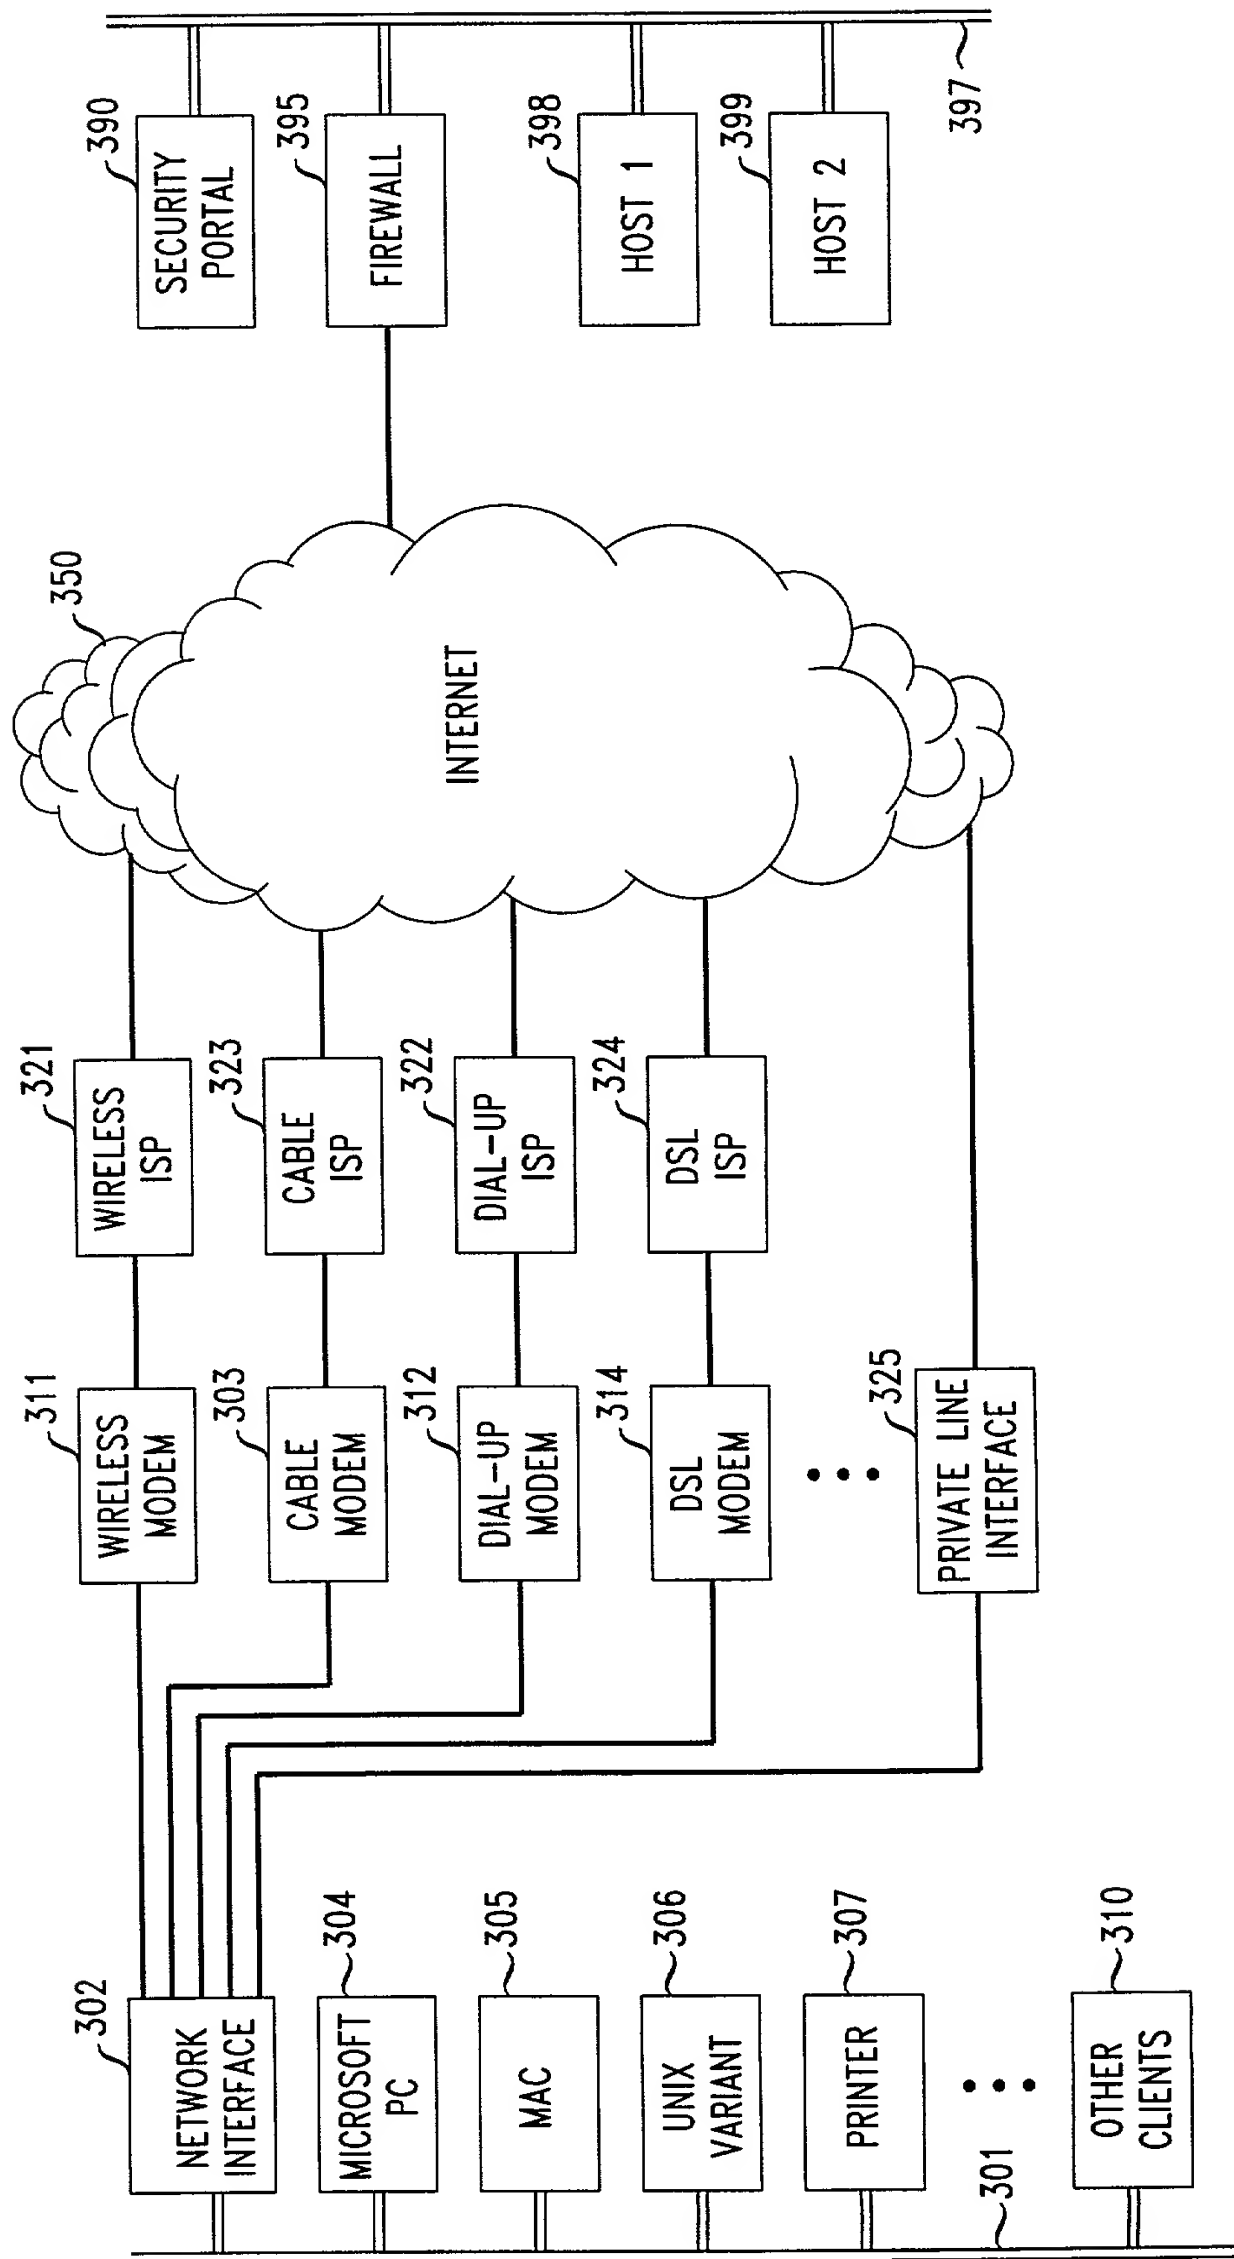


FIG. 4

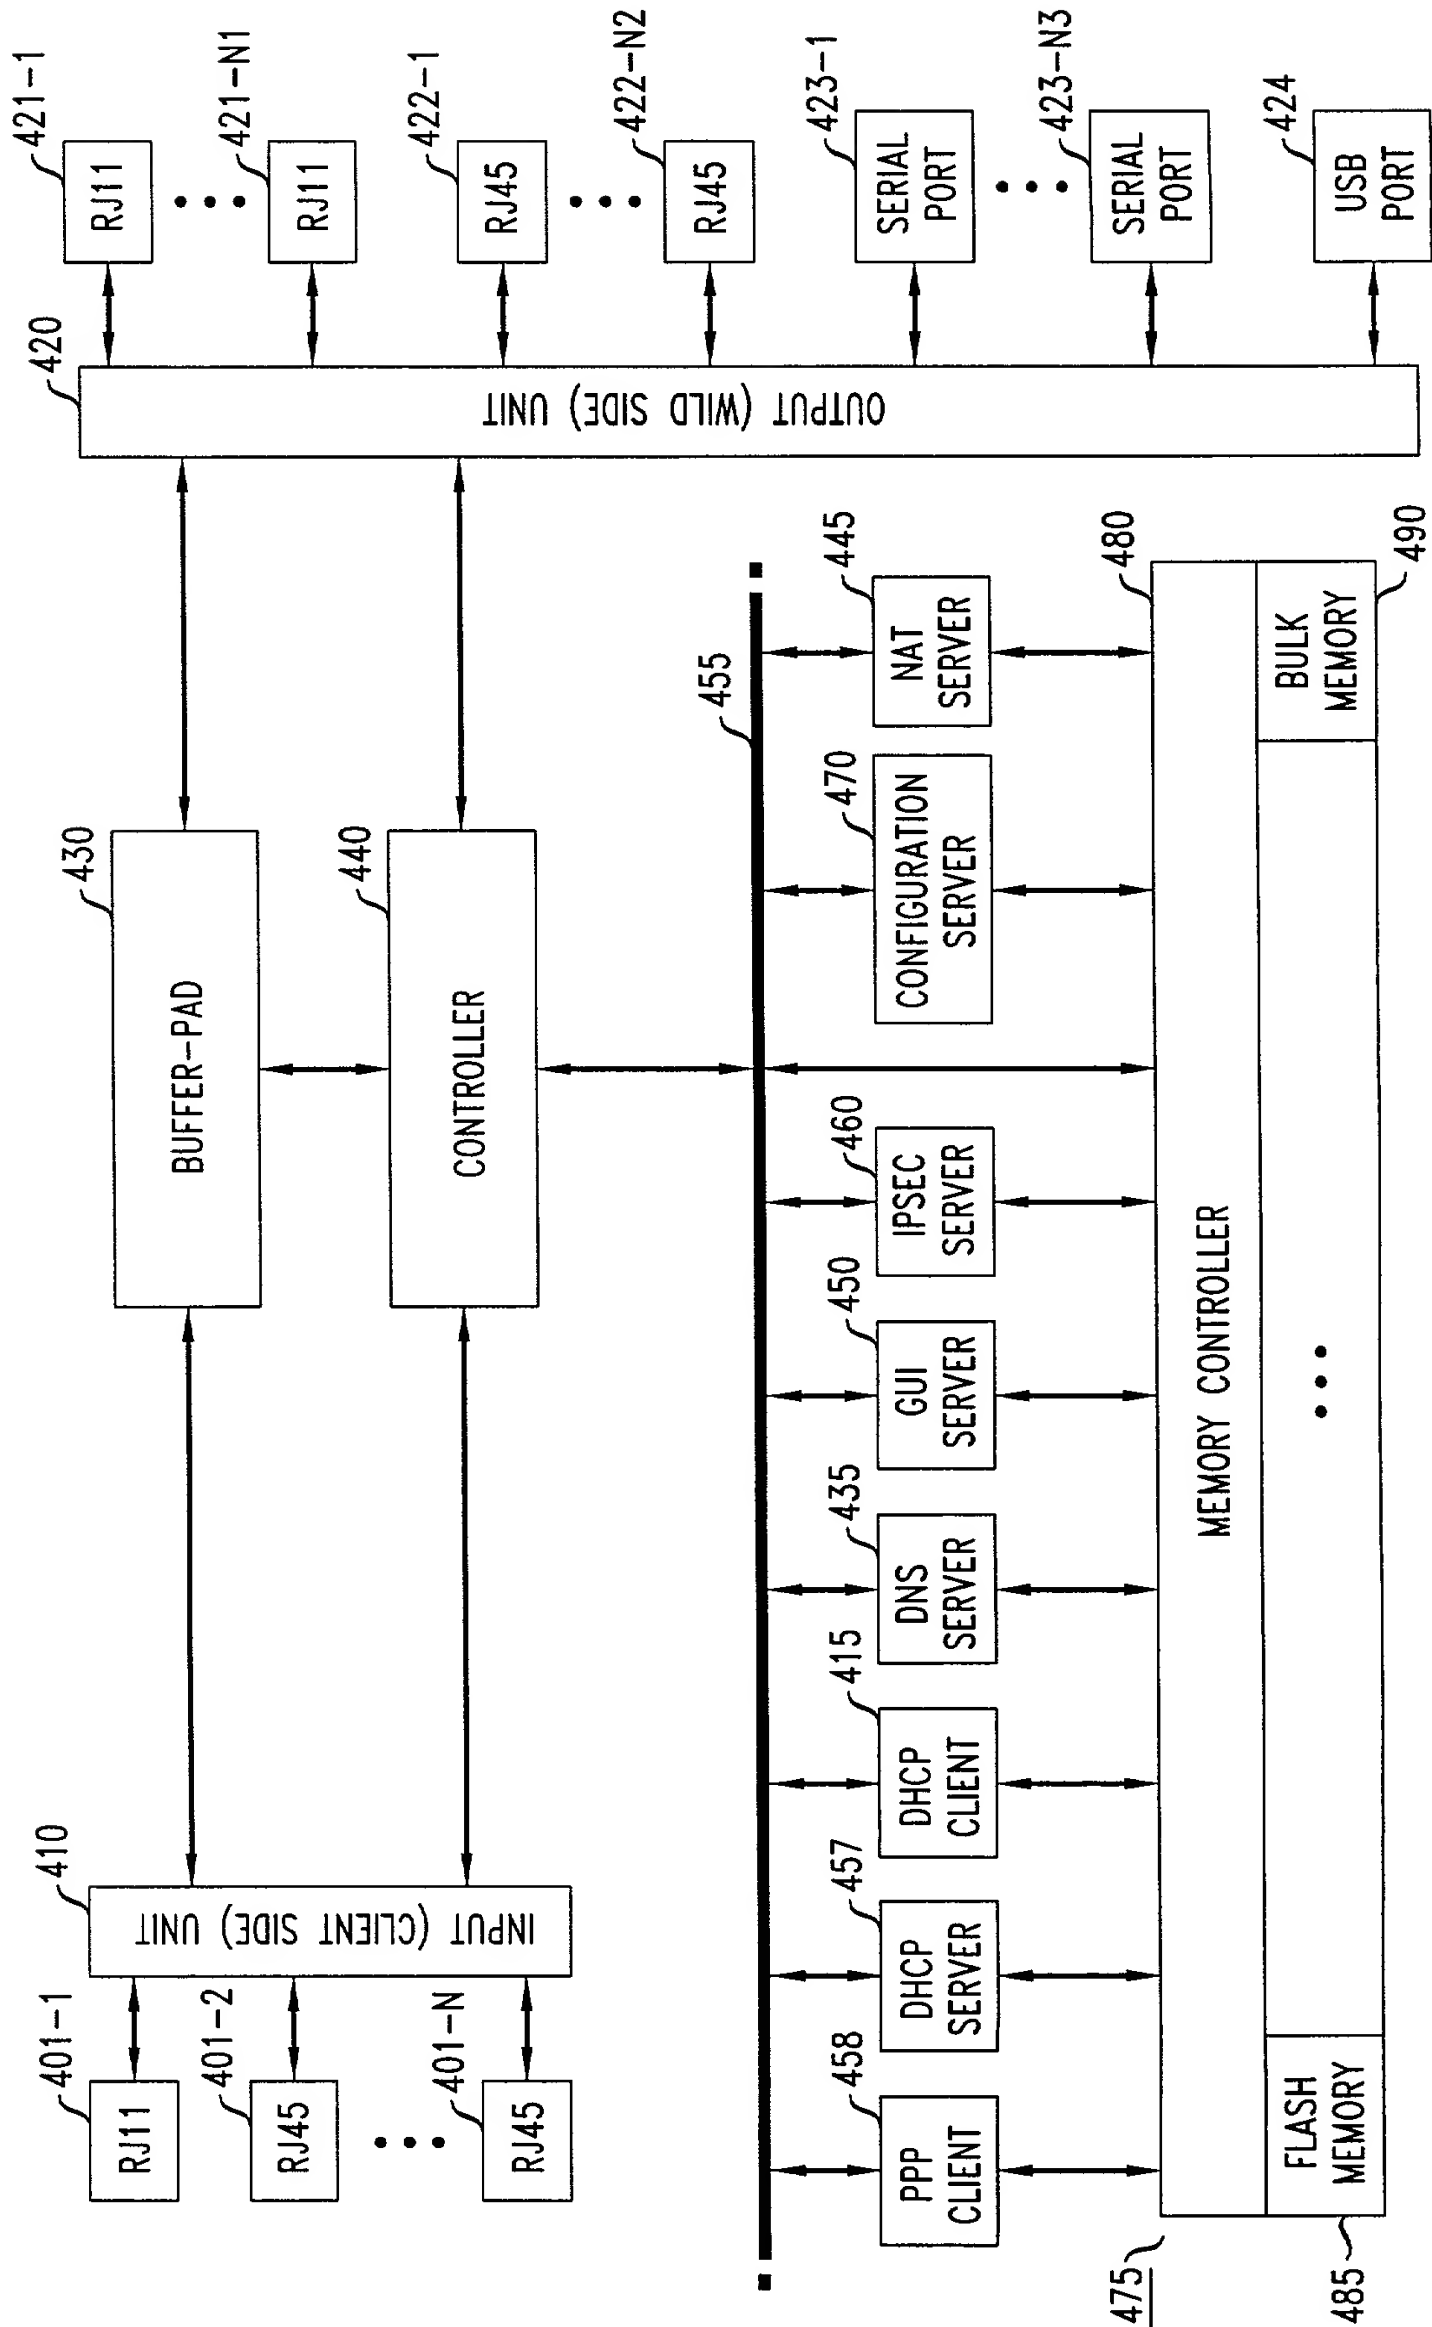


FIG. 5

DEVICE ID	DEVICE TYPE
IP CONFIG (STATIC/DHCP)	
TELCO LOGINS	
TUNNEL ID	
⋮	
WEB SERVER PAGES	
GUI INFO	
DNS INFO	
DHCP INFO	
PPP INFO	

FIG. 6

6/15

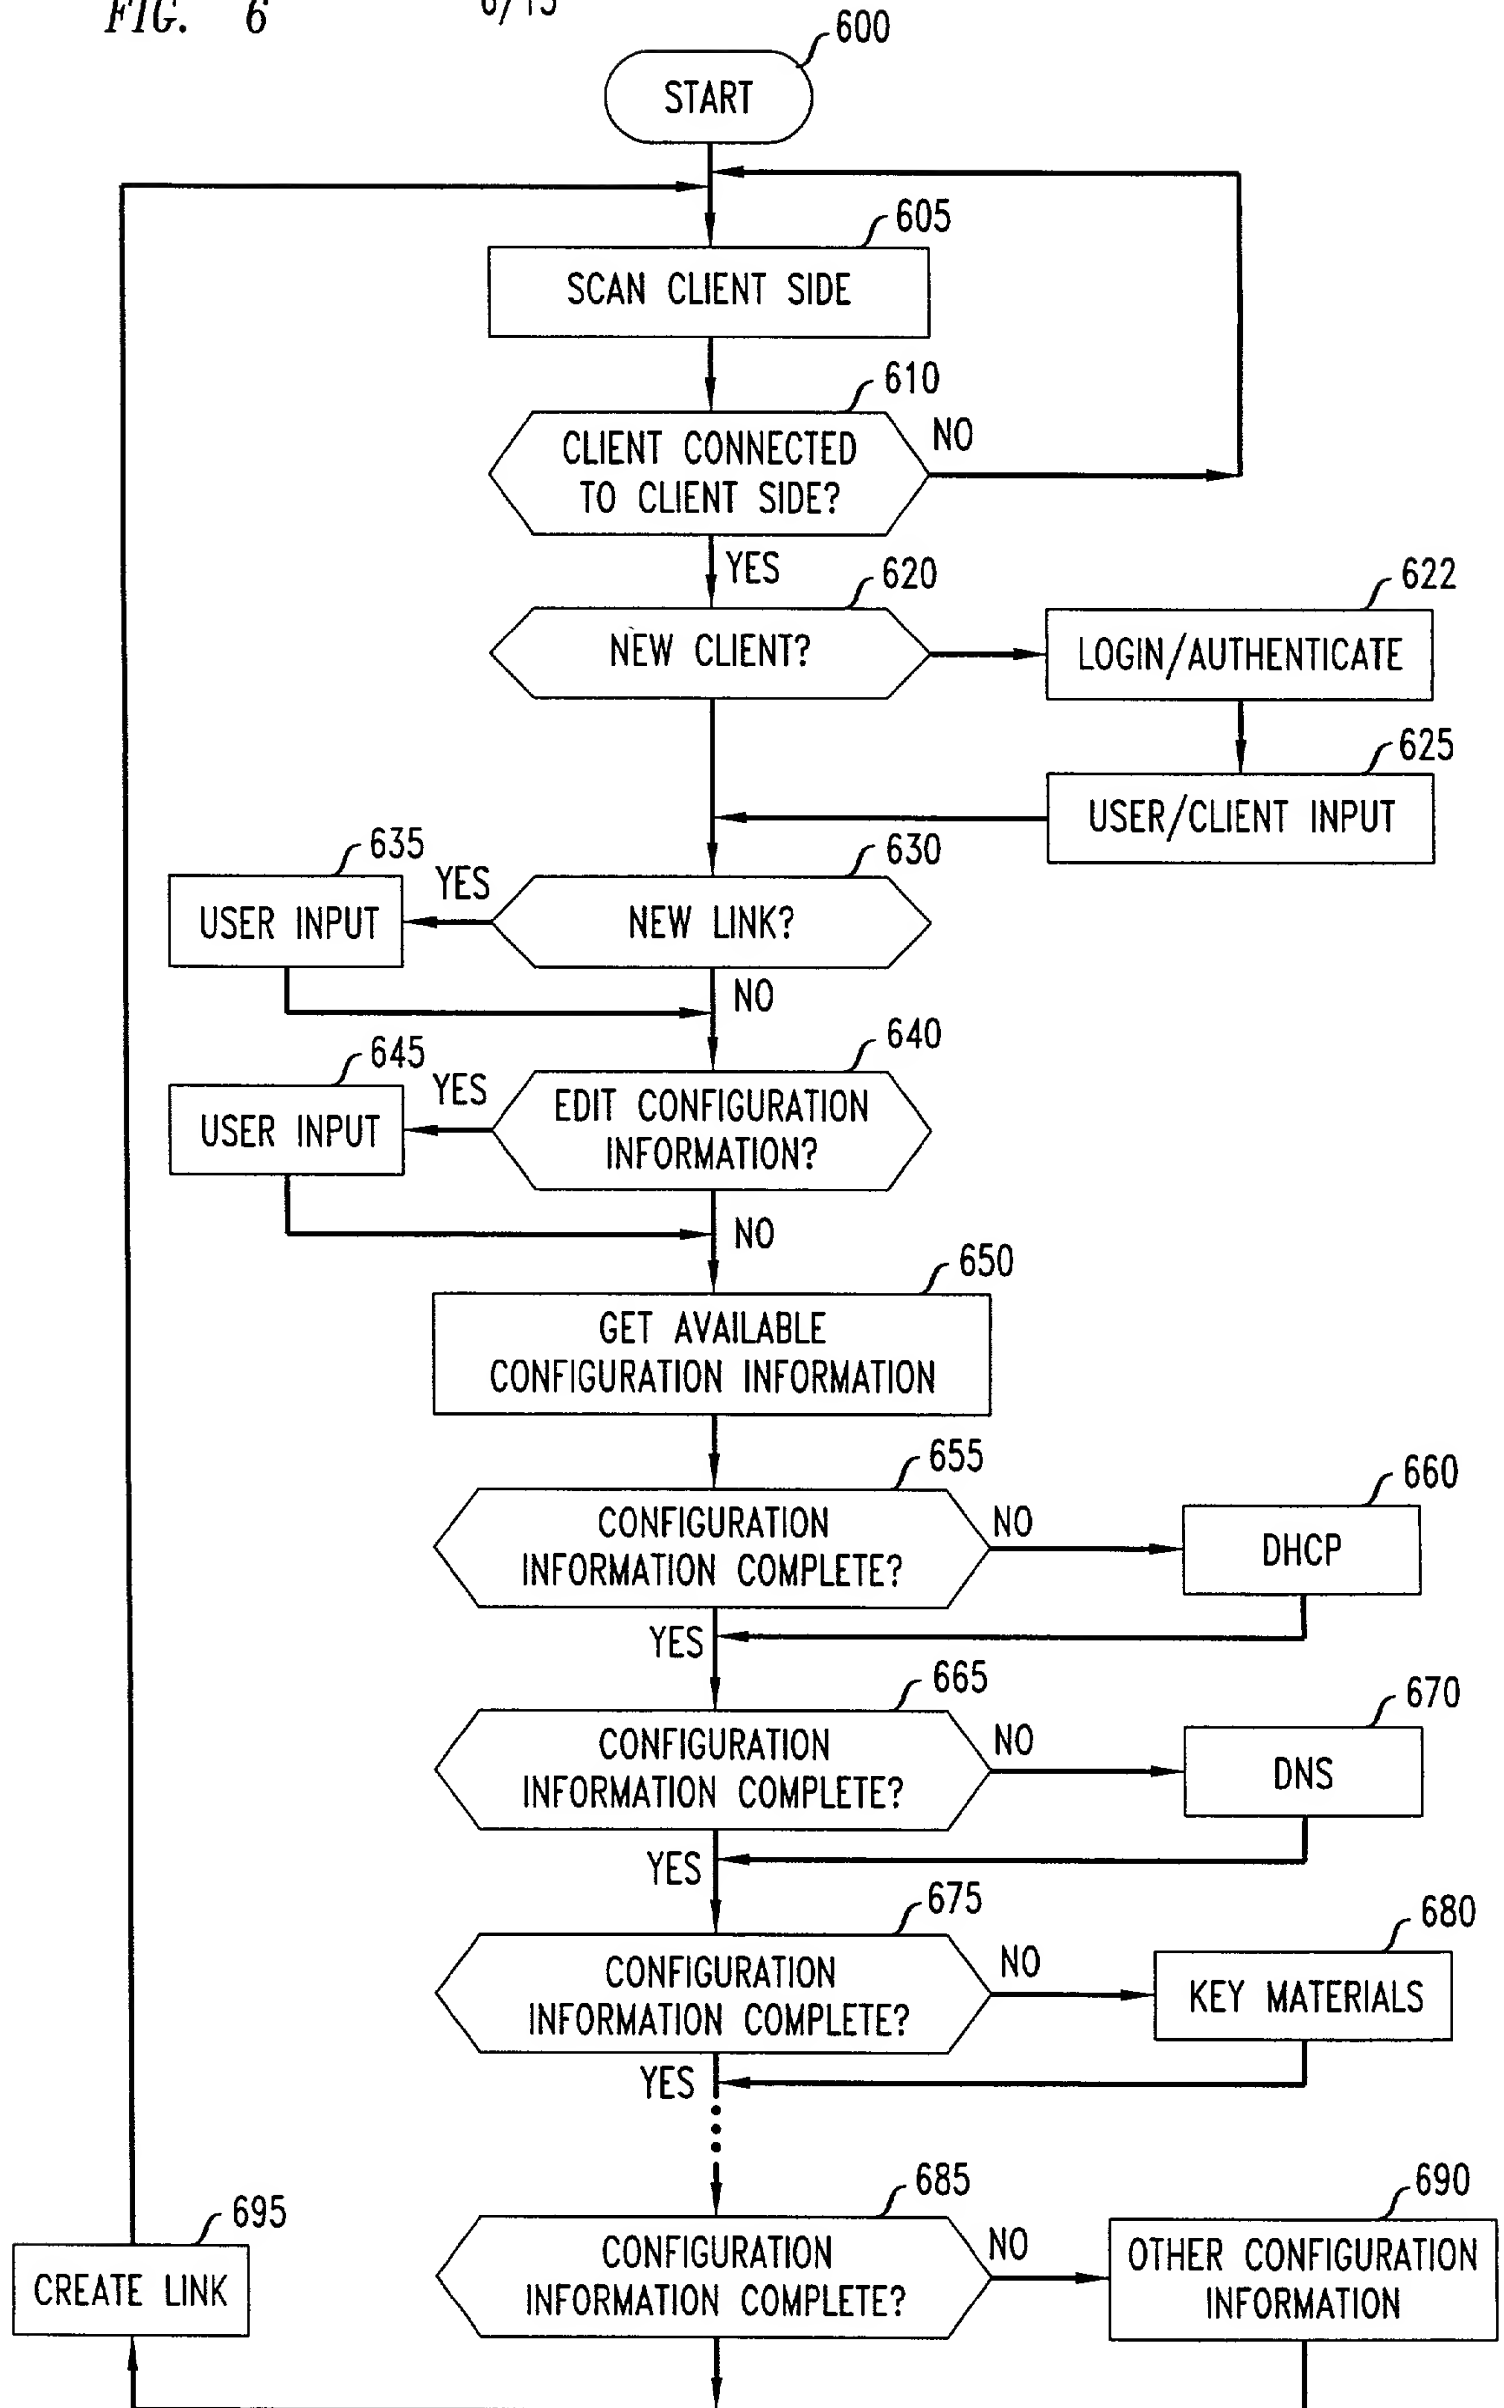


FIG. 7

LOG IN

USER ID:

PASSWORD:

LOG IN

FIG. 12

MAIN MENU

{SYSTEM MESSAGE} AS OF {PC TIME}
{ERROR MESSAGE}

STATUS
DISCONNECT
VIEW SYSLOG
CLOSE

AT&T WORLDNET
@HOME
UUU . . . UU
VVV . . . VV
WWW . . . WW
XXX . . . XX
YYY . . . YY
ZZZ . . . ZZ

—

▽

NETWORK CONNECTION - {NAME} USING DHCP
CLIENT: {CLIENT NAME}

CONNECT

EDIT

COPY

DELETE

FIG. 8

MAIN MENU

STATUS

DISCONNECT

VIEW SYSLOG

CLOSE

{SYSTEM MESSAGE} AS OF {PC TIME}

{ERROR MESSAGE}

SELECT A CONNECTION FROM THE LIST OR CREATE A NEW CONNECTION.

AT&T WORLDNET

@HOME

UUU . . . UU

VVV . . . VV

WWW . . . WW

XXX . . . XX

YYY . . . YY

ZZZ . . . ZZ

—

▽

{NAME OF CONNECTION}

(((CONNECTION SPECIFIC FIELDS; SEE FOLLOWING)))

STANDARD DIAL-UP

CUSTOMIZED DIAL-UP

FIXED-IP NETWORK

DHCP NETWORKS

PPPoE NETWORK

CONNECT

EDIT

COPY

DELETE

FIG. 9

MAIN MENU

STATUS

DISCONNECT

VIEW SYSLOG

CLOSE

{SYSTEM MESSAGE} AS OF {PC TIME}

{ERROR MESSAGE}

SELECT A CONNECTION FROM THE LIST OR CREATE A NEW CONNECTION.

AT&T WORLDNET
@HOME
UUU . . . UU
VVV . . . VV
WWW . . . WW
XXX . . . XX
YYY . . . YY
ZZZ . . . ZZ

—

▽

DIAL-UP CONNECTION - {NAME OF CONNECTION}

USER ID: {USER ID} PASSWORD: *****

PHONE NUMBER TO DIAL: 800-555-1234

— OPTION: DIAL 9 TO ACCESS AN OUTSIDE LINE.

— OPTION: DIAL *70 TO DISABLE CALL WAITING.

CONNECT

EDIT

COPY

DELETE

FIG. 10

MAIN MENU

STATUS

DISCONNECT

VIEW SYSLOG

CLOSE

{SYSTEM MESSAGE} AS OF {PC TIME}

{ERROR MESSAGE}

SELECT A CONNECTION FROM THE LIST OR CREATE A NEW CONNECTION.

AT&T WORLDNET
@HOME
UUU . . . UU
VVV . . . VV
WWW . . . WW
XXX . . . XX
YYY . . . YY
ZZZ . . . ZZ

—

▽

DIAL-UP CONNECTION — {NAME OF CONNECTION}

USER ID: {USER ID} PASSWORD: *****

CUSTOMIZED MODEM DIAL STRING:

ATDT*70, 18005551234,,,,4128000011112222

CONNECT

EDIT

COPY

DELETE

FIG. 11

MAIN MENU

STATUS

DISCONNECT

VIEW SYSLOG

CLOSE

{SYSTEM MESSAGE} AS OF {PC TIME}

{ERROR MESSAGE}

SELECT A CONNECTION FROM THE LIST OR CREATE A NEW CONNECTION.

AT&T WORLDNET
@HOME
UUU . . . UU
VVV . . . VV
WWW . . . WW
XXX . . . XX
YYY . . . YY
ZZZ . . . ZZ

—

▽

NETWORK CONNECTION — {NAME}

IP ADDRESS: {IP_ADDRESS}

MASK: {MASK_ADDRESS}

GATEWAY: {GATEWAY}

CONNECT

EDIT

COPY

DELETE

12/15

FIG. 13

CONNECTING ...

CONNECT TO {NAME} ...		<div>STATUS</div>	
		<div>DISCONNECT</div>	
		<div>VIEW SYSLOG</div>	
		<div>CLOSE</div>	
<div>VCS OFFICE(SM) VCS AGENT(SM) PAT</div>	<div>—</div>	{SERVICE NAME} LOGIN	
		SERVICE URL:	<div>http://aaaa.research.att.com/bbb/ccc</div>
		SUBSCRIBER ID:	<div>123.45.67.89</div>
	<div>▽</div>	PASSWORD:	<div>255.0255.0</div>
		<input type="checkbox"/> SAVE PASSWORD	
		<div>LOGIN</div>	
		<div>TRY AGAIN</div>	<div>MAIN MENU</div>

FIG. 14

NEW CONNECTION

Step 1: Name	
WHAT IS THE NAME OF THIS CONNECTION? <input type="text"/>	
Step 2: Connection Type	
<input type="radio"/> DIAL-UP CONNECTION A DIAL-UP CONNECTION USES A MODEM AND OBTAINS CONNECTION BY DIALING INTO A NUMBER.	<input type="radio"/> NETWORK CONNECTION A NETWORK CONNECTION USUALLY CONNECTS THROUGH LOCAL AREA NETWORK (LAN), CABLE MODEM, OR DSL.
Step 3: Specific Information	
FOR DIAL UP CONNECTION . . .	FOR NETWORK CONNECTION . . .
<div>USER ID: <input type="text"/></div> <div>PASSWORD: <input type="text"/></div> <div><input type="radio"/> USE STANDARD DIAL-UP CONFIGURATION PHONE NUMBER TO DIAL: <input type="text"/> - OPTION: DIAL <input type="text"/> TO ACCESS ON OUTSIDE LINE. - OPTION: DIAL <input type="text"/> TO DISABLE CALL WAITING. - OR - <input type="radio"/> USE CUSTOMIZED MODEM DIALING STRING <input type="text"/></div>	<div><input checked="" type="radio"/> USE DHCP HOST: <input type="text"/></div> <div>- OR -</div> <div><input type="radio"/> USE FIXED IP ADDRESS IP ADDRESS: <input type="text"/> MASK: <input type="text"/> GATEWAY: <input type="text"/></div>
<div>SAVE</div> <div>START OVER</div> <div>CANCEL</div>	

FIG. 15

EDIT CONNECTION

NAME: {NAME}

DIAL-UP CONNECTION

USER ID: POPULATED

PASSWORD:

☒ USE STANDARD DIAL-UP CONFIGURATION

PHONE NUMBER TO DIAL: 800-555-1234

- OPTION: DIAL 9 TO ACCESS AN OUTSIDE LINE.

- OPTION: DIAL *70 TO DISABLE CALL WAITING.

- OR -

☐ USE CUSTOMIZED DIALING STRING

SAVE

START OVER

CANCEL

SAVE AS >>

FIG. 16

EDIT CONNECTION

NAME: <input data-bbox="530 856 1137 936" type="text" value="{NAME}"/>	NETWORK CONNECTION
<input checked="" type="radio"/> <i>USE DHCP</i>	
CLIENT: <input data-bbox="1153 1097 1539 1176" type="text"/>	
<p>- OR -</p> <input type="radio"/> <i>USE CUSTOMIZED DIALING STRING</i>	
IP ADDRESS: <input data-bbox="1159 1397 1526 1473" type="text" value="123.45.678.90"/>	
MASK: <input data-bbox="1159 1501 1526 1578" type="text" value="255.254.253.252"/>	
GATEWAY: <input data-bbox="1159 1606 1526 1682" type="text" value="123.4.56.789"/>	
<div>SAVE START OVER CANCEL</div> <div>SAVE AS >> <input data-bbox="1159 1948 1579 2044" type="text"/></div>	